ECLIPSE RATIOMATIC BURNERS

Data 110-11 6/29/04

Model 1250 RM - Version 1.01

For Serial Numbers 95-5500 & Above


Specifications Input vs. Chamber Pressure	14,600,000 Btu/hr. @ -5.0"	w.c.	4279 kW @-12.5 mbar	
	13,800,000 Btu/hr. @ -3.0"		4045 kW @ -7.5 mbar	
	12,900,000 B tu/hr. @ -1.0"		3781 kW @ -2.5 mbar	
	12,500,000 Btu/hr. @ 0.0"	w.c.	3664 kW @ 0.0 mbar	
	12,000,000 Btu/hr. @ +1.0"	w.c.	3517 kW @ +2.5 mbar	
	11,500,000 Btu/hr. @ +2.0" w.c. 3371 kW @ +5.0 mbar Input may be increased by 20% if sufficient secondary air is available to complete combustion.			
Turndown	100:1 with neutral chamber pressure.			
Configurations	Burner Configuration Burner with alloy tube Burner with refractory block	1500	<u>Chamber Temp.</u> ° F (538° C) ° F (982° C)	
	Maximums shown are for average installations. Depending on conditions, higher temperatures can be obtained. Contact Eclipse for details.			
Fuel	Standard nozzle burns natural gas, propane, propane/air mixes without changing internals. Contact Eclipse for other fuels.			
Gas Inlet Pressure	Minimum: 20" w.c. (50 m	oar) natu	ural gas, .65 s.g.	
at the proportionator inlet	Maximum: 2 psig (138 m		ural gas, .65 s.g.	
Pilot Gas Pressure at the pilot cock inlet	Minimum: 6" w.c. (15 m	oar) natu	ural gas, .65 s.g.	
High Fire Flame Length	144" (3.66 m) Measured from the end of the firing tube, firing parallel to air flow with neutral chamber pressure. When firing perpendicular to air flow, flame length will be shorter. Contact your local Eclipse representative for details.			
Piloting	Integral spark-ignited pilot; ignition plug included.			
Flame Monitoring	By UV scanner only. Scanners & mounting kits are available from Eclipse.			
Control Motor Requirements	90° travel with full stroke timing of 15 seconds or longer. Ovens with high chamber drafts or backpressures may require less than a full 90° stroke. In these cases, use adjustable stroke motors or motors equipped with travel- limiting auxiliary switches.			
Emissions	Ratiomatics produce low NOx, CO and aldehydes. Emissions performance depends not only on the burner, but also factors such as chamber tempera- ture, chamber design, and heat loading. For estimates of Ratiomatic perfor- mance in your application, call Eclipse.			
Packaging Options			ognized valve packages available.	

CAUTION: It is dangerous to use any fuel burning equipment unless it is equipped with suitable flame sensing devices and automatic fuel shut-off valves. Eclipse can supply such equipment or information on alternate sources.




Dimensions, 1250 RM


Dimensions are subject to change without notice. Contact Eclipse for certified prints prior to fabrication or installation.

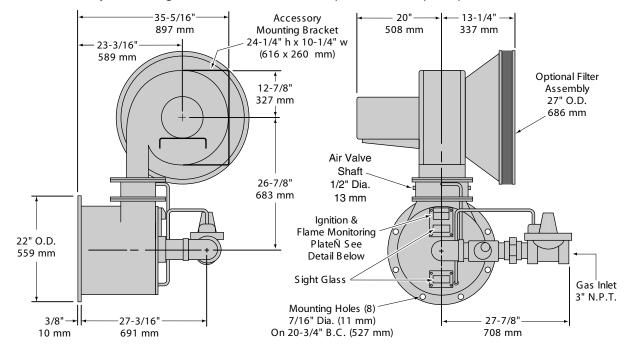

Alloy Tube Assembly – #110265

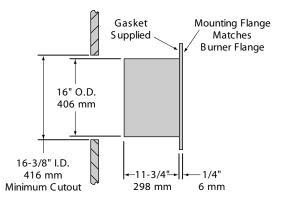

Block & Holder Assembly – #187296-61

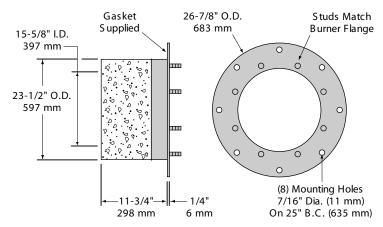


Component Information

Item	Description	Part #
1250 RM Burner Assembly		
w/Alloy Tube; Left Hand Blower (shown)		110412
w/Alloy Tube; Right Hand Blower (motor opposite side)		110402
w/Block & Holder; Left Hand Blower (shown) w/Block & Holder; Right Hand Blower (motor opposite side)		110442 110432
Air Filter Assembly	Optional	110280
Replacement Filter Element		15608
Spark Plug ¹	For burner with tube or block.	150000-5
Blower Motor ¹	10 hp, 230/460/3/60 TEFC, 3600 RPM	11217
Proportionator ¹	Eclipse ES 369, 3"	10316
Pilot Cock ¹	Eclipse lever handle, 1/4"	12659
Gas Adjusting Butterfly ¹	Eclipse 112 BV, 3"	500993

¹ Included with burner assembly.

Block & Holder and Alloy Tube are interchangeable in the field.

Flame Monitoring Plate Detail

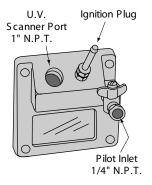



Offered By: Power Equipment Company 2011 Williamsburg Road Richmond, Virginia 23231 Phone (804) 236-3800 Fax (804) 236-3882

www.peconet.com