


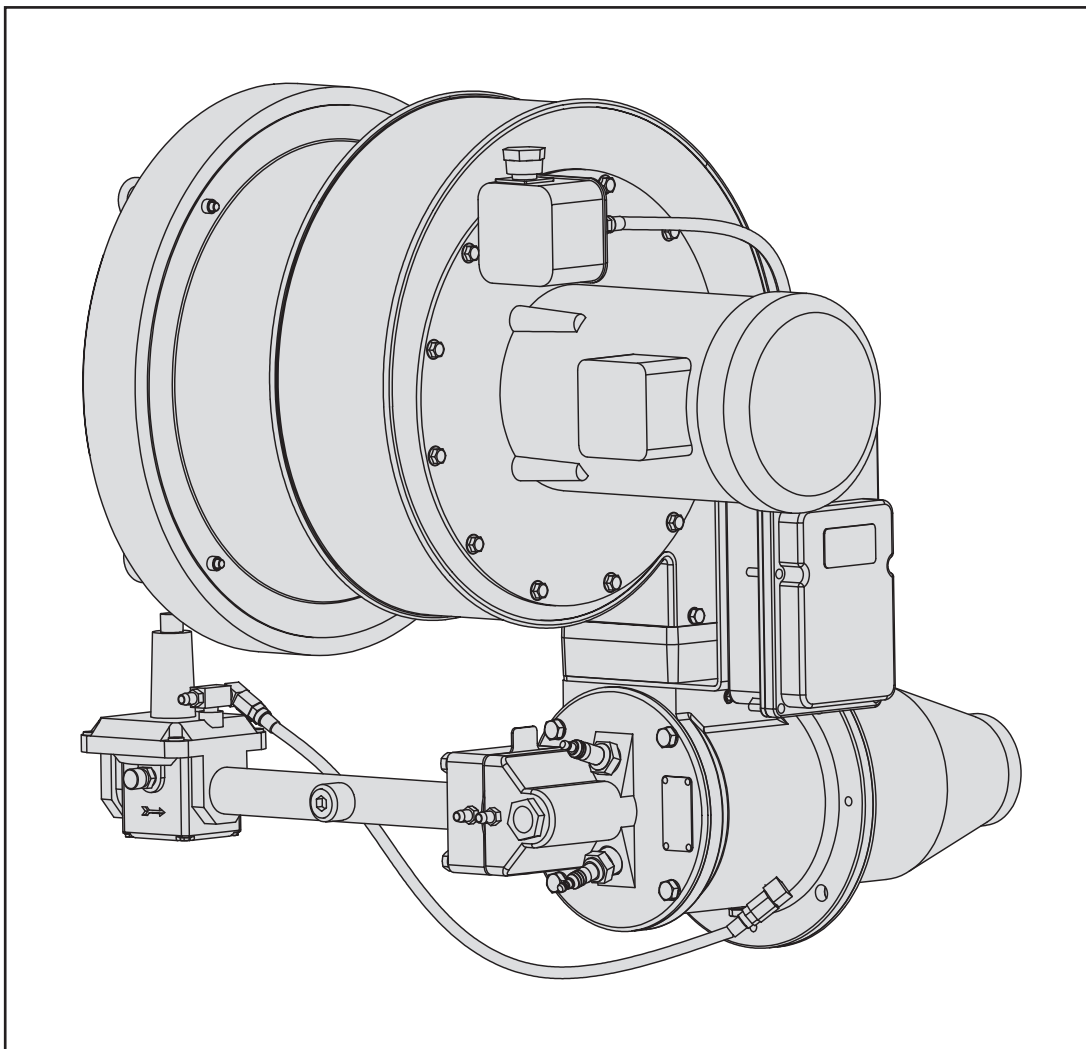

RatioAir

Burners

RA Series
Version 1



COPYRIGHT

Copyright 2004 by Eclipse, Inc. All rights reserved worldwide. This publication is protected by federal regulation and shall not be copied, distributed, transmitted, transcribed or translated into any human or computer language, in any form or by any means, to any third parties, without the express written consent of Eclipse, Inc., Rockford, Illinois, U.S.A.

DISCLAIMER NOTICE

We reserve the right to change the construction and/or configuration of our products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the product. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Eclipse, Inc. warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

We have made every effort to make this manual as accurate and complete as possible. Should you find errors or omissions, please bring them to our attention so that we may correct them. In this way we hope to improve our product documentation for the benefit of our customers. Please send your corrections and comments to our Documentation Manager.

LIABILITY AND WARRANTY

It must be understood that Eclipse's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the furnishing of such replacement parts and Eclipse, Inc. will not be liable for any other injury, loss, damage or expenses, whether direct or consequential, including but not limited to loss of use, income or damage to material arising in connection with the sale, installation, use of, inability to use or the repair or replacement of Eclipse's products.

Any operation expressly prohibited in this Guide, any adjustment, or assembly procedures not recommended or authorized in these instructions shall void the warranty.



About this manual

AUDIENCE

This manual has been written for people who are already familiar with all aspects of a nozzle-mix burner and its add-on components, also referred to as “the burner system.”

These aspects are:

- installation
- use
- maintenance.

The audience is expected to have had experience with this kind of equipment.

RATIOAIR DOCUMENTS

Installation Guide No. 115

- This document

RatioAir Data Sheets, Series 115

- Available for individual RA models
- Required to complete installation

Design Guide No. 115

Used with Data Sheet to design burner system

RELATED DOCUMENTS

- EFE 825 (Combustion Engineering Guide)
- Eclipse Bulletins and Info Guides: 710, 732, 742, 760, 818, 832, 852, 854, 856, 610, 820, 930.

Purpose

The purpose of this manual is to ensure the installation and adjustment of a safe, effective and trouble-free combustion system.

DOCUMENT CONVENTIONS

There are several special symbols in this document. You must know their meaning and importance.

The explanation of these symbols follows below. Please read it thoroughly.



Danger:

Indicates hazards or unsafe practices which WILL result in severe personal injury or even death.

Only qualified and well trained personnel are allowed to carry out these instructions or procedures.

Act with great care and follow the instructions.



Warning:

Indicates hazards or unsafe practices which could result in severe personal injury or damage.

Act with great care and follow the instructions.



Caution:

Indicates hazards or unsafe practices which could result in damage to the machine or minor personal injury, Act carefully.



Note:

Indicates an important part of the text. Read thoroughly.

HOW TO GET HELP

If you need help, contact your local Eclipse Combustion representative.



Table of Contents

	About this manual	3
	Audience	3
	RatioAir Documents	3
	Related Documents	3
	Document Conventions	4
	How to Get Help	4
	Table of Contents	5
1	Introduction	6
	Product Description	6
2	Safety	7
	Capabilities	8
	Operator Training	8
	Replacement Parts	8
3	Installation	9
	Handling and Storage	9
	Approvals of Components	9
	Pre-installation Checklist	11
	Burner	11
	Gas Piping	13
	Check List After Installation	15
4	Adjustment, Start & Stop	16
	Step 1: Reset the system	16
	Step 2: Set low fire air	18
	Step 3: Ignite the burner	19
	Step 4: Set low fire gas (if required)	24
	Step 5: Verify settings	26
5	Maintenance & Troubleshooting	27
	Maintenance	27
	Monthly Checklist	27
	Yearly Checklist	28
	Troubleshooting Procedures	29
	Illustrated Parts List	32
	Appendix	35
	Conversion Factors	35
	Key to System Schematics	36

Introduction

1

PRODUCT DESCRIPTION

The RatioAir is a nozzle-mix type burner designed for direct and indirect air heating of a wide range of applications including:

- Industrial ovens and furnaces
- Glass Lehrs
- Indirect Fired Air Heaters
- RTO Incinerators
- After Burners
- Galvanizing Kettles
- Waterbath Vaporizers


The burner package includes a combustion air blower and an air:gas ratio regulator to fire over a wide gas turndown range with controlled ratio. Available with three different outlet tube velocity characteristics (standard, medium and high velocity), RatioAir Burners are capable of outlet speeds of 250 ft/s with the medium velocity and 500 ft/s with the high velocity.

The burner is designed for:

- efficient ratio controlled combustion
- reliable burner operation
- simple burner adjustment
- direct spark ignition
- multiple fuel capability

A wide variety of options and configurations are available due to the modular design of the burner.

The RatioAir Burner

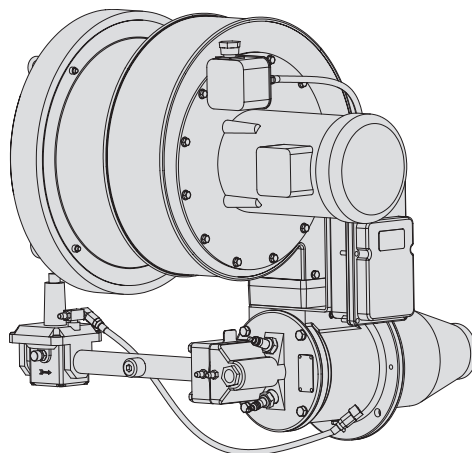

Safety

2

INTRODUCTION

SAFETY

This section is provided as a guide for the safe operation of the RatioAir burner system. All involved personnel should read this section carefully before operating this system.



Danger:

The RatioAir burners, described herein, are designed to mix fuel with air and burn the resulting mixture. All fuel burning devices are capable of producing fires and explosions if improperly applied, installed, adjusted, controlled, or maintained.

Do not bypass any safety feature; fire or explosion could result.

Never try to light a burner if it shows signs of damage or malfunction.



Warning:

The burner might have HOT surfaces. Always wear protective clothing when approaching the burner.



Note:

This manual provides information in the use of these burners for their specific design purpose. Do not deviate from any instructions or application limits described herein without written advice from Eclipse Combustion.

Read the entire manual before attempting to start this system. If you do not understand any part of the information contained in this manual, contact your local Eclipse representative or Eclipse Combustion before continuing.

CAPABILITIES

Only qualified personnel, with good mechanical aptitude and experience with combustion equipment, should adjust, maintain, or troubleshoot any mechanical or electrical part of this system.

OPERATOR TRAINING

The best safety precaution is an alert and trained operator. Train new operators thoroughly and have them demonstrate an adequate understanding of the equipment and its operation. A regular retraining schedule should be administered to ensure operators maintain a high degree of proficiency.

REPLACEMENT PARTS

Order replacement parts from Eclipse Combustion only. All Eclipse Combustion approved, customer supplied valves or switches should carry UL, FM, CSA, CGA, and/or CE approval, where applicable.



Installation

3

INTRODUCTION

In this chapter you will find information and instructions needed to install the burner and system components.

HANDLING AND STORAGE

Handling

Inspect the system, being sure the components are clean and free of damage.

Use the appropriate support and handling equipment when lifting the burner.

Protect all components on the system from weather, damage, dirt and moisture.

Protect the system and its components from excessive temperatures and humidity.

Storage

When storing the system for an extended period Eclipse recommends placing it in a cool, clean, dry room.

Keep all the system components stored in their original packaging as long as possible.

APPROVALS OF COMPONENTS

Limit controls and safety equipment

All limit controls and safety equipment must comply with all applicable local codes and/or standards, which may include:

- NFPA Standard 86
- NFPA Standard 86C
- UL
- FM
- CGA
- EN 746-2

Electrical wiring

All electrical wiring must comply with all applicable local codes and/or standards, which may include:

- NFPA Standard 70
- ANSI-C11981
- EN 746-2

Gas piping

All gas piping must comply with all applicable local codes and/or standards, which may include:

- NFPA Standard 54
- ANSI Z223
- EN 746-2

Where to get the standards

The NFPA Standards are available from:

National Fire Protection Agency
Batterymarch Park
Quincy, MA 02269

The ANSI Standards are available from:

American National Standard Institute
1430 Broadway
New York, NY 10018

The UL Standards are available from:

333 Pfingsten Road
Northbrook, IL 60062

The FM Standards are available from:

1151 Boston-Providence Turnpike
P.O. Box 9102
Norwood, MA 02062

The CGA Standards are available from:

55 Scarsdale Road
Toronto, Ontario
Canada M3B 2R3

Information on the EN standards, and where to get the standards is available from:

Comité Européen de Normalisation
Strassartstraat 36
B-1050 Brussels

Comité Européen de Normalisation Electronique

Strassartstraat 36
B-1050 Brussels

PRE-INSTALLATION CHECKLIST

Air Supply

Provide an opening in the burner room of at least one square inch per 4000 BTU/hr (6 cm² per 1 kW) to supply the burner intake with fresh, outdoor, combustion air.

If there are corrosive fumes or materials in the surrounding air, find an uncontaminated source to supply air to the burner.

Exhaust

Do not allow exhaust gases to accumulate in the work area. Provide a means for exhausting these gases from the building.

Access



Install the burners so they may be easily accessed for inspection and maintenance.

Environment

Be sure the burner operating environment matches the original operating specifications. Check the following items:

- voltage, frequency, and stability of electrical power
- fuel type and fuel supply pressure
- adequate fresh, clean, combustion air
- humidity, altitude, and temperature of the supply air
- presence of damaging corrosive gases in the air
- prevent direct exposure to water.

BURNER

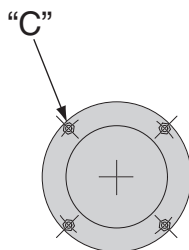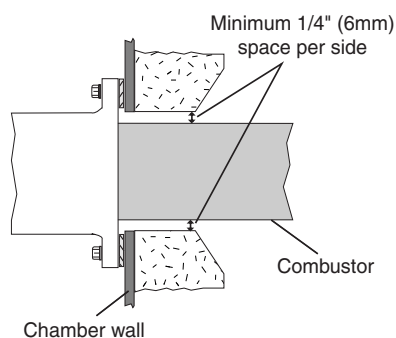

Chamber Opening

Provide an opening in the chamber wall at least ½" (12mm) larger in diameter than the outside diameter of the combustor, or ½" (12mm) larger in height and width than the refractory block.

(1/4" - 6mm per side)



Provide an accessible pressure tap on the chamber wall to measure the pressure inside the firing chamber. The pressure tap should be located near the burner.

Mounting Pattern


Attach four mounting bolts to the chamber wall. Position these bolts to match the clearance holes (C) on the burner mounting flange. Refer to the appropriate RatioAir data sheet.

INSTALLATION

(CONTINUED)

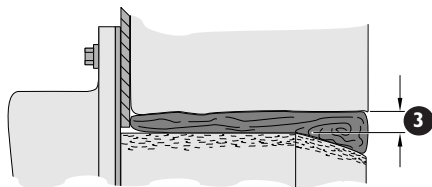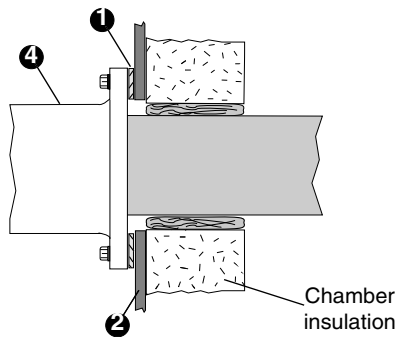

Alloy

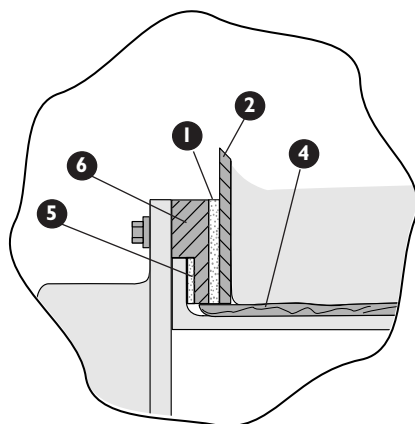

Silicon Carbide

Chamber Wall

Make sure the chamber wall ② is strong enough to support the weight of the burner ④. If necessary, reinforce the mounting area.

Burner Mounting


Mount burner to chamber wall using four (4) customer supplied nuts and lock washers.

Alloy Combustor

1. Make sure the gasket ① is installed between the burner and the chamber wall ② .
2. Make sure that gasket ① does not leak.
3. Check the size of the clearance. If the gap ③ around the firing tube is larger than 1/2", pack the gap with ceramic fiber ④

Silicon Carbide (SiC) Combustor only


1. Make sure the gasket ① is installed between the burner flange and chamber wall. ②
2. Make sure that gasket ⑤ is installed between SiC tube and flange ⑥.
3. Make sure neither gasket ① nor ⑤ leaks.
4. Check the size of the clearance. If the gap around the firing tube is larger than 1/2", pack the gap with ceramic fiber ④ .

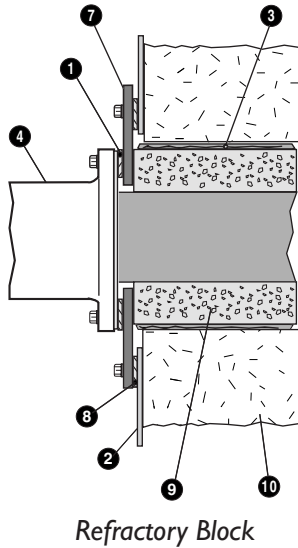

Refractory Block

1. Be sure the gasket ① is installed between the burner ④ and the block holder ⑦.
2. Be sure the gasket ③ is installed between the block holder ⑦ and the chamber wall ②.
3. Support the weight of the refractory block ⑨ with hard brick work ⑩. Fill space around the block ⑨ with soft gasket material ⑧.

GAS PIPING

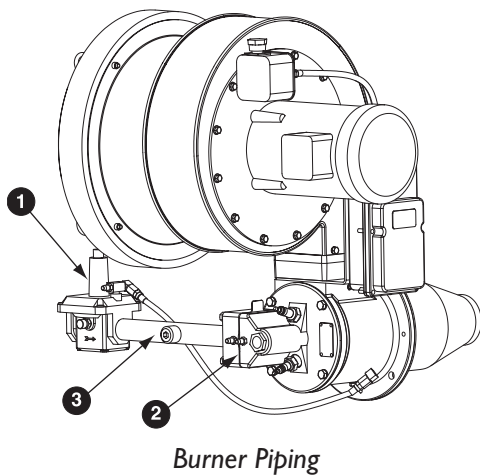

Burner Piping

The burner is factory assembled and shipped as ordered.



Note:


If it is necessary to redirect piping, be sure the:

- ratio regulator spring column ① is pointing up.
- arrow on the ratio regulator points in the direction of gas flow.
- integral fuel orifice and o-rings ② are re-installed.
- same straight run of pipe ③ remains between the ratio regulator and the burner .

Supply Piping

Inlet pressure to the ratio regulator must stay within specified limits. Refer to the appropriate RatioAir data sheet.


- Locate the valve train close to the burner. The gas must reach the burner during the fixed trial for ignition.
- Sufficiently size shut off valves in the valve train.
- Make sure piping is large enough.
- Minimize piping elbows.

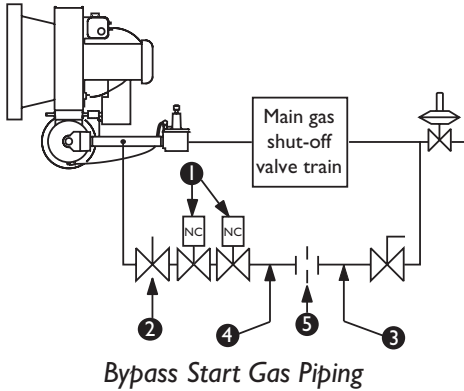

Bypass Start Gas Piping (optional)

Install the piping as shown in the schematics using the following guidelines.

- Locate the start gas solenoids ❶ close to the burner. The gas must reach the burner during the trial for ignition period.
- Minimize piping elbows.
- Install an adjustable limiting orifice (ALO) ❷ for start gas adjustment. Refer to Bulletin 728 and 730 for further information.
- Include a straight run of pipe at least 8 inches long ❸ before (upstream from) the start gas orifice ❹ (optional) and at least 4 inches long ❺ after (downstream from) the start gas orifice.

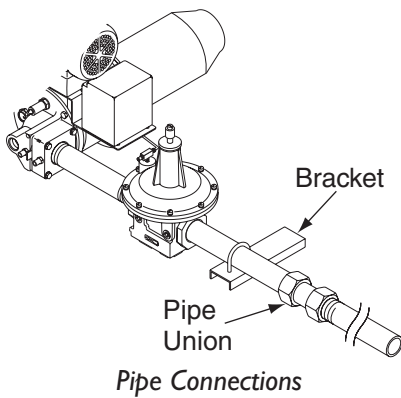

Pipe Connections

- Installation of a pipe union in the gas line is recommended to simplify burner removal.
- Use of flexible pipe is optional.



Note:


Flexible pipe causes higher pressure drops than standard pipe. Consider this when sizing your gas lines.

Piping Support

Use brackets or hangers to support the gas piping. If you have questions, consult your local gas company.

Control Motor

Install a control motor to modulate the air butterfly valve if not previously installed on the burner.

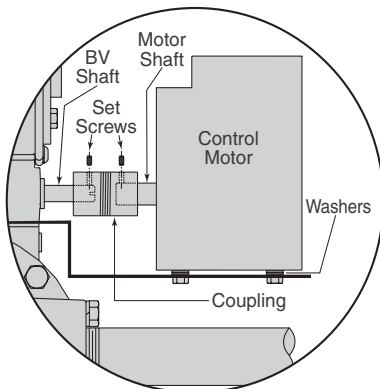

Note:

Be sure the control motor shaft and air butterfly valve shaft are aligned properly. If using an Eclipse Actuator Mounting Parts Kit, the supplied washers may be used as shims (stacked 0, 1, or 2 high) to ensure proper alignment. Additionally, a flexible coupling can be used to handle minor misalignment.

CHECK LIST AFTER INSTALLATION

To verify the system was properly installed, perform the following checks:

1. Be sure there are no leaks in the gas lines.
2. Be sure all the components contained in the flame monitoring and control system are properly installed. This includes verifying that:
 - all the switches are installed in the correct locations.
 - all wiring, pressure, and impulse lines are properly connected.
3. Be sure all components of the spark ignition system are installed and functioning properly.
4. Be sure the blower rotates in the proper direction. If the rotation is incorrect, have a qualified electrician rewire the blower to rotate in the proper direction.
5. Be sure all valves are installed in the proper location and correctly oriented relative to the flow direction.



Adjustment, Start & Stop

4

INTRODUCTION

In this chapter, you will find instructions on how to adjust, start, and stop the burner system. Become familiar with burner control methods before attempting to make adjustments..

Danger:



The RatioAir burners, described herein, are designed to mix fuel with air and burn the resulting mixture. All fuel burning devices are capable of producing fires and explosions if improperly applied, installed, adjusted, controlled, or maintained.

Do not bypass any safety feature; fire or explosion could result.

Never try to light a burner if it shows signs of damage or malfunction.

ADJUSTMENT

Adjustment steps:



1. Reset the system
2. Set low fire air
3. Ignite the burner
4. Set low fire gas
5. Verify settings

Step 1: Reset the system

Reset procedure:

1. Set the low gas pressure switch to 20% below the “Main gas inlet pressure” range as specified in the appropriate data sheet.
2. Set the high gas pressure switch to 20% above the “Main gas inlet pressure” range as specified in the appropriate data sheet.
3. Close all the burner gas valves, manual and automatic.
4. Try to ignite the burner; be sure the flame monitoring system indicates a flame failure.

**Step I: Reset system
(continued)**

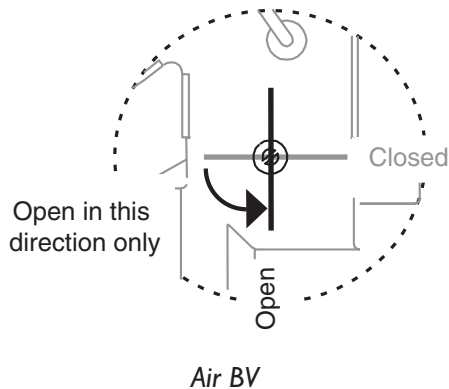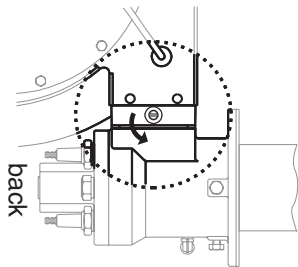

5. Activate the pressure switches and other limit interlocks. Be sure the switches fail as intended in the event of a power failure.



Danger:

If simulated limits or simulated flame failures do not shut down the fuel system within the required failure response time, immediately correct the problem before proceeding.

6. If the burner is firing into a duct or chamber with a circulating fan, start the fan to produce a full process air flow past the burner.
7. Adjust main gas inlet pressure to the ratio regulator within the range specified in the appropriate data sheet.



Warning:

Gas inlet pressures must stay within the specified range. Pressure above the specified range can damage the ratio regulator.



Warning:




Pressure below the specified range can impair the ability of the ratio regulator to control the gas flow.

Operating the system outside the specified range can cause excess fuel consumption and the possible accumulation of unburned fuel in the chamber.

In extreme cases, this accumulation of unburned fuel may cause fires or explosions.

8. Verify that the actuator opens the air BV towards the back of the burner as shown. If it doesn't, refer to the actuator's literature for instructions on how to reverse the direction.

Step2: Set low fire air

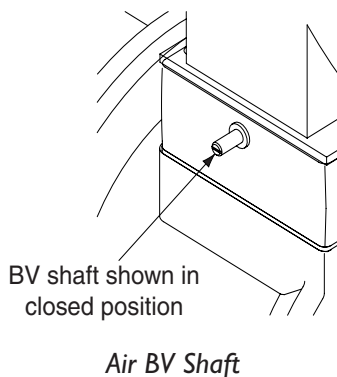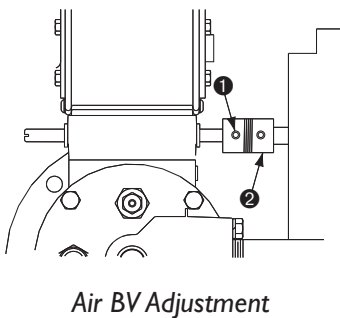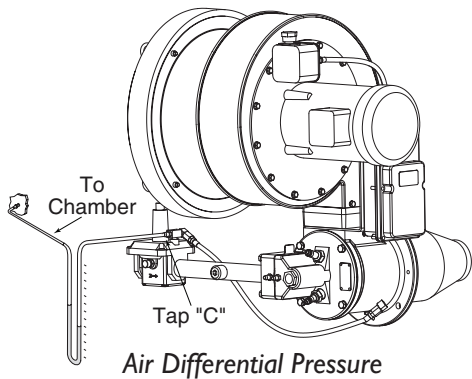

Low fire air adjustment procedure:

1. Start combustion air blower.
2. Drive control motor to low fire position.
3. Measure air differential pressure between tap (C) and combustion chamber.



Note:

The pressure tap is in the open position when the screw inside the tap is unscrewed approximately 1/2 turn. Do not remove screw. Be sure to tighten pressure tap screw clockwise to the closed position after pressure measurements have been taken.

4. Set low fire air.
 - a. Loosen the set screw ❶ on burner side of coupling ❷.



Note:

There is a slot in the end of the BV shaft that is parallel to the air damper. This slot is used for visual indication of the BV position. The BV is closed when the shaft slot is perpendicular to the direction of air flow through the BV.

- b. Rotate air BV shaft to fully closed position. (Holes in BV damper will supply low fire air.)



Note

When firing into a positive chamber pressure it may be necessary to rotate the air BV from closed position in the direction of actuator travel to increase air differential pressure for reliable ignition.

- c. Hold BV shaft firmly in place and tighten set screw ❶.



Note:

High fire air adjustment is not required if burner is firing into a neutral pressure chamber and a 90° travel control motor is used.

It may be necessary to limit control motor stroke to less than 90° if firing into a large positive or negative chamber.

Contact your Eclipse Combustion representative for further information.

5. Verify high fire air
 - a. Drive control motor to high fire, full open.
 - b. Compare the high fire air differential pressure between tap (C) and the combustion chamber to the appropriate data sheet chart "Air ΔP vs. Air Flow." The air differential pressure may be up to 1" w.c. lower than shown in the chart when the burner is not firing. If high fire air is insufficient, refer to Section 5, Troubleshooting and Maintenance, in this document.
6. Return the control motor to the low fire position.
7. Close the pressure taps.

Step3: Ignite the burner

Ignition procedure:




Warning:

This procedure is written with the assumption the burner has a flame monitoring control system installed and operating. A proper purge cycle must be part of the system and purge timing should not be bypassed.

Determine system layout and use the applicable ignition procedure.


Low fire start **without** high turndown option.
Procedure "A", page 20

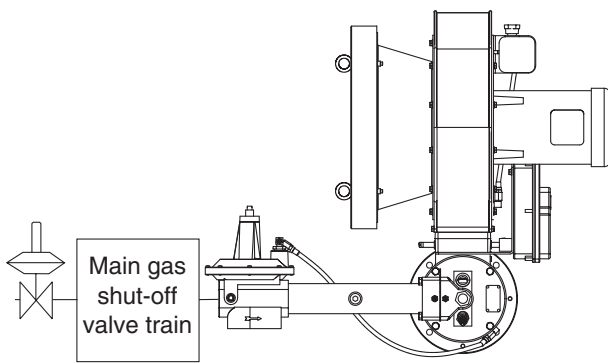

Note:

The ratio regulator is factory set. Use Procedure "A" only if burner does not ignite or requires further adjustment.


Low fire start **with** high turndown option.
Procedure "B", page 21

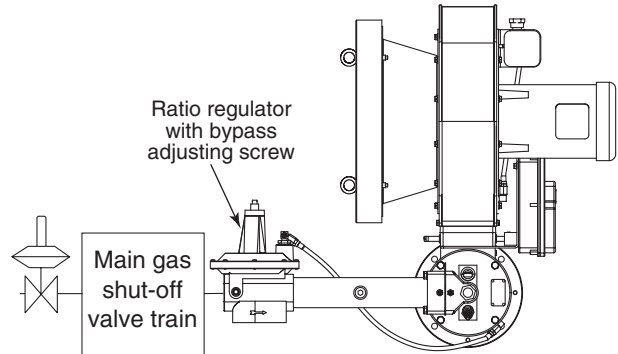


Note:

The RatioAir burner with high turndown option includes a ratio regulator with internal bypass adjustment.

Bypass start gas **without** fuel orifice meter
Procedure "C", page 22

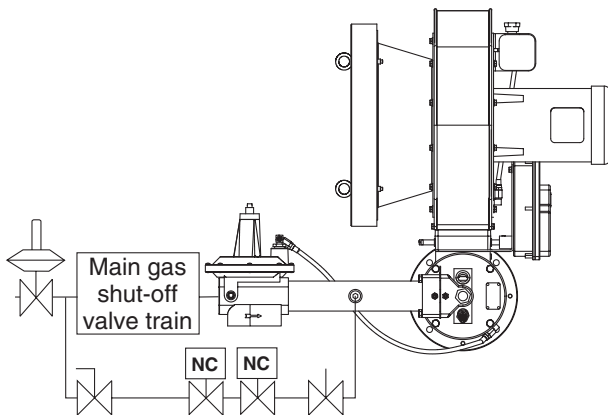


Bypass start gas **with** fuel orifice meter
Procedure "D", page 23

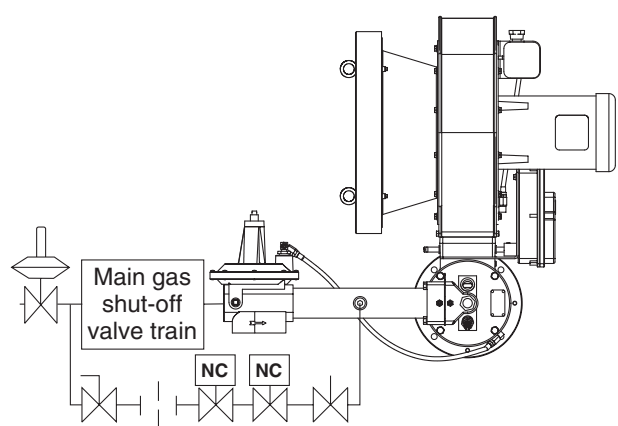


Step3: Ignite the burner

Procedure A:

Low fire start **without** high turndown option.

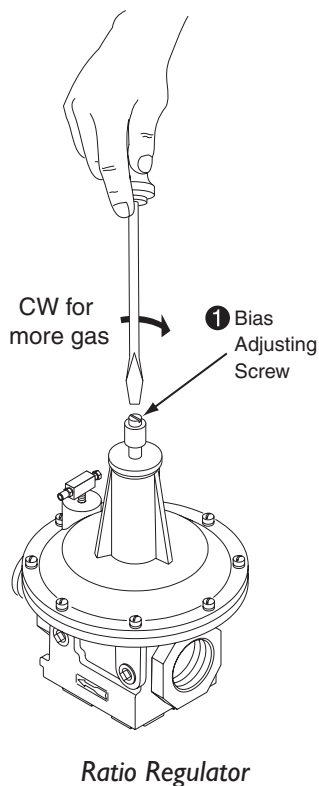

Low fire start without high turndown option:

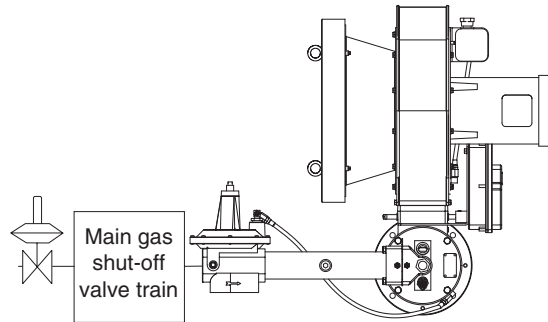

1. Drive control motor to low fire.
2. Be sure combustion air blower is running.
3. Verify bias adjusting screw ❶ on ratio-regulator spring column is six full clockwise turns ($360^\circ \times 6$) down from the top (initial setting). Use five turns for Model RA0025 only.
4. Open main gas manual shut off valves.
5. Set system control to stay at low fire during and after ignition sequence.
6. Attempt to ignite burner.
7. If burner does not ignite:
 - a. Attempt to ignite burner again to purge air from the gas piping.
 - b. If burner still does not ignite, turn bias adjusting screw ❶ a half turn clockwise to increase gas flow.
 - c. Attempt to ignite burner.
 - d. Repeat steps b and c until burner ignites. If necessary, refer to Chapter 5 for troubleshooting tips.
8. Flame signal strength:


Adjust gas flow with bias adjusting screw ❶ for lowest gas flow that maintains a stable flame signal:

 - clockwise, for more fuel
 - counterclockwise, for less fuel.
9. Verify low fire flame:
 - a. Shut off gas. When chamber temperature is below 250°F (121°C), shut off combustion air blower.
 - b. Restart combustion air blower and ignite burner.
 - c. Verify repeatability of ignition and low fire flame signal.

Step3: Ignite the burner


Procedure B:

Low fire start **with** high turndown option.

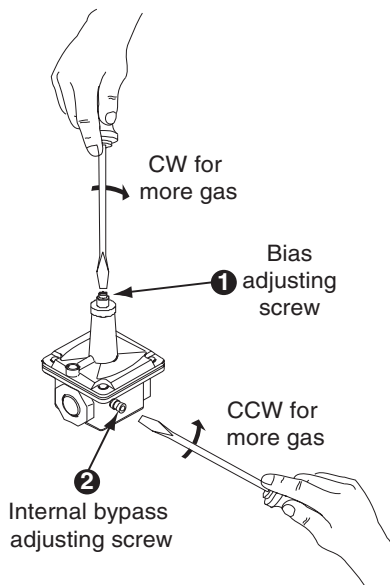

*Ratio Regulator
(with internal bypass
adjusting screw)*

Low fire start with high turndown option:

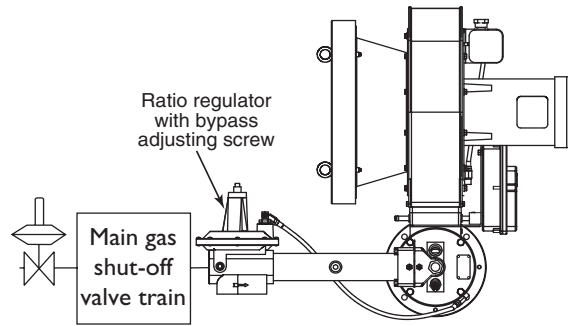

1. Drive control motor to low fire.
2. Be sure combustion air blower is running.
3. Verify bias adjusting screw ① on ratio-regulator spring column is six full clockwise turns ($360^\circ \times 6$) down from top (initial setting).
4. Open main gas manual shut off valves.
5. Close internal bypass adjusting screw ② by turning it clockwise to closed position.
6. Set system control to stay at low fire during and after ignition sequence.
7. Attempt to ignite burner.
8. If burner does not ignite:
 - a. Attempt to ignite burner again to purge air from the gas piping.
 - b. If burner still does not ignite, turn bias adjusting screw ① a half turn clockwise to increase gas flow.
 - c. Attempt to ignite burner.
 - d. Repeat steps b and c until burner ignites. If necessary, refer to Chapter 5 for troubleshooting tips.
9. After burner ignites, slowly decrease gas flow with bias adjusting screw ①. Decrease gas flow until the flame signal becomes erratic. (Refer to flame monitoring relay literature for a description of an erratic flame signal.)
10. If burner has gone out:

Repeat ignition sequence. Turn internal bypass adjusting screw ② a half turn counterclockwise to increase gas flow at each attempt until burner lights.
11. Flame signal strength:


Adjust gas flow with internal bypass adjusting screw ② for lowest gas flow that maintains a stable flame signal:

 - counterclockwise, for more fuel
 - clockwise, for less fuel.
12. Verify low fire flame:
 - a. Shut off gas. When chamber temperature is below 250°F (121°C), shut off combustion air blower.
 - b. Restart combustion air blower and ignite burner.
 - c. Verify repeatability of ignition and low fire flame signal.


Step3: Ignite the burner

Procedure C:

Bypass start gas **without** fuel orifice meter.

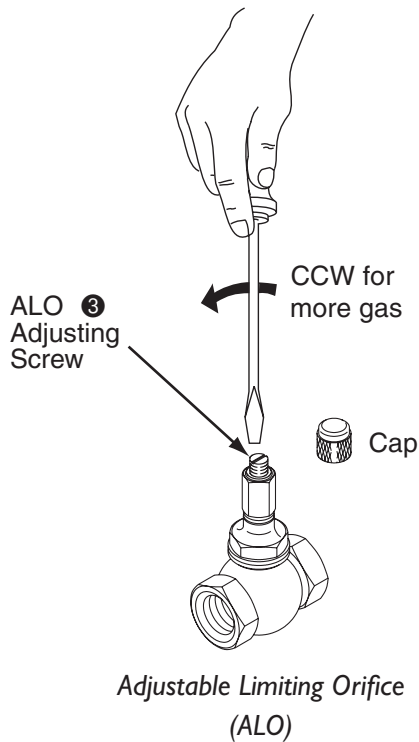

Bypass start gas without fuel orifice meter:

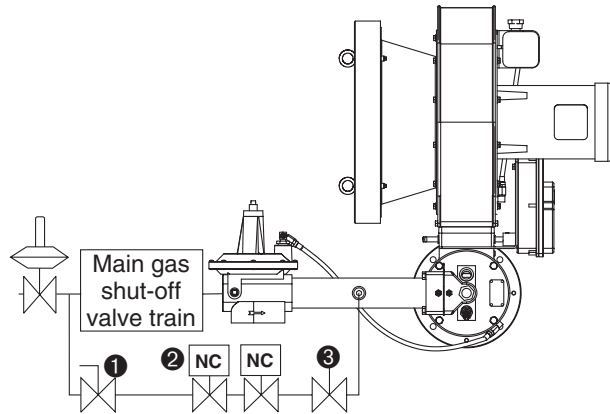

1. Drive control motor to low fire.
2. Be sure combustion air blower is running.
3. Be sure main gas manual shut off valves are closed.
4. Open manual shut off valve ① in the bypass.
5. Set the system to operate on bypass gas only.
6. Attempt to ignite burner by energizing spark and bypass gas solenoid valves ②.
7. If burner does not ignite:
 - a. Attempt to ignite burner again to purge air from the gas piping.
 - b. If burner still does not ignite, turn ALO adjusting screw ③ a half turn counterclockwise to increase gas flow.
 - c. Attempt to ignite burner.
 - d. Repeat steps b and c until burner ignites. If necessary, refer to Chapter 5 for troubleshooting tips.
8. Flame signal strength:


Adjust bypass gas flow with ALO adjusting screw ③ for lowest gas flow that maintains a stable flame signal:

 - counterclockwise, for more fuel
 - clockwise, for less fuel.
9. Verify bypass flame:
 - a. Shut off gas. When chamber temperature is below 250°F (121°C), shut off combustion air blower.
 - b. Restart combustion air blower and ignite burner.
 - c. Verify repeatability of ignition and low fire flame signal.

Step3: Ignite the burner


Procedure D:

Bypass start gas **with** fuel orifice meter

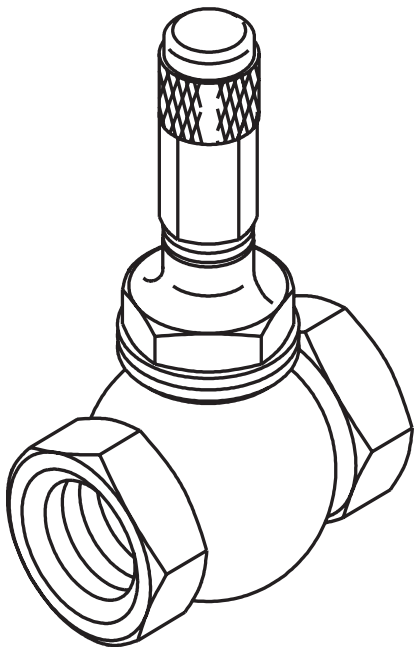


Adjustable Limiting Orifice
(ALO)


Bypass start gas with fuel orifice meter:

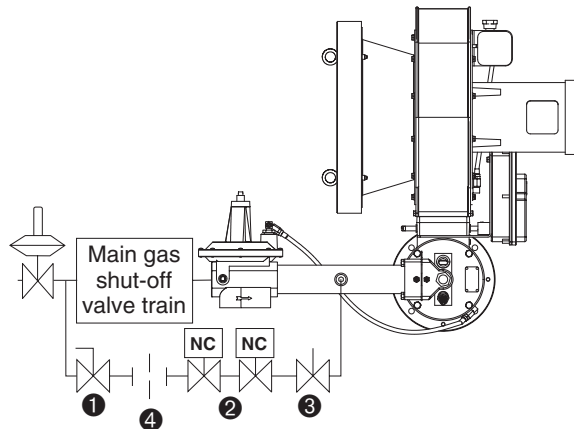

1. Drive control motor to low fire.
2. Be sure combustion air blower is running.
3. Be sure main gas manual shut off valves are closed.
4. Prepare to measure bypass gas flow at the fuel orifice meter ④.
5. Open manual shut off valve ① in the bypass.
6. Set the system to operate on bypass gas only.
7. Attempt to ignite burner by energizing spark and bypass gas solenoid valves ②.
8. If burner does not ignite:
 - a. Attempt to ignite burner again to purge air from the gas piping.
 - b. If burner still does not ignite, turn ALO adjusting screw ③ a half turn counterclockwise to increase gas flow.
 - c. Attempt to ignite burner.
 - d. Repeat steps b and c until burner ignites. If necessary, refer to Chapter 5 for troubleshooting tips.
9. Adjust bypass gas flow with ALO adjusting screw ③ to achieve the low fire gas flow indicated on data sheet. Refer to the fuel orifice meter literature for instructions on flow measurement.

Note:
 When firing into negative or fluctuating chamber pressures, a higher bypass gas flow may be necessary.
10. Verify the bypass gas flame:
 - a. Shut off gas. When chamber temperature is below 250°F (121°C), shut off combustion air blower.
 - b. Restart combustion air blower and ignite burner.
 - c. Verify repeatability of ignition and low fire flame signal.

Step 4: Set low fire gas
(Only required if bypass start is used.)

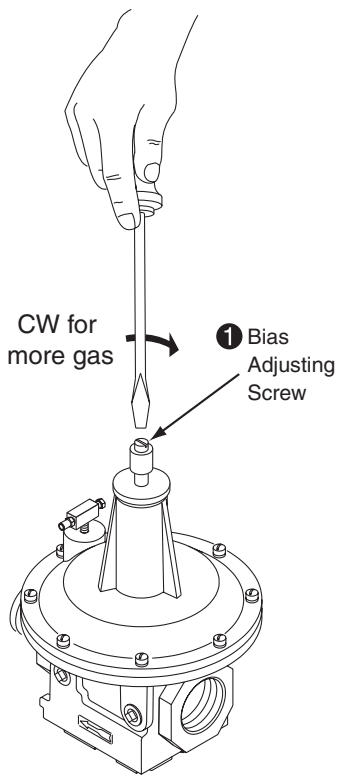

Ratio Regulator

Set low fire gas procedure:



Warning:


This procedure is written with the assumption the burner has a flame monitoring control system installed and operating. A proper purge cycle must be part of the system control and purge timing should not be bypassed.

This step is only necessary when bypass start gas is used. Determine the piping method (low fire or bypass) and ratio regulator installed (standard or high turndown), and proceed with the applicable procedure:

Bypass start gas with standard turndown ratio regulator:

1. Verify bias adjusting screw ❶ on ratio regulator spring column is six full clockwise turns ($360^\circ \times 6$) down from the top (initial setting).
2. Open all manual gas shut off valves.
3. Set system control to stay at low fire during and after ignition sequence.
4. Ignite the burner.
5. If burner goes out due to main gas flame failure:
Turn bias adjusting screw ❶ a half turn clockwise to increase gas flow. Repeat ignition sequence until burner lights.
6. Flame signal strength:
Adjust gas flow with bias adjusting screw ❶ for lowest gas flow that maintains a stable flame signal:
 - clockwise, for more fuel
 - counterclockwise, for less fuel
7. Verify low fire flame .
 - a. Drive control motor from low fire and back. Verify low fire and stable flame signal are repeated.
 - b. Turn the burner off and repeat the ignition sequence. Verify low fire and stable flame signal are repeated.


**Step4: Set low fire gas
(continued)**

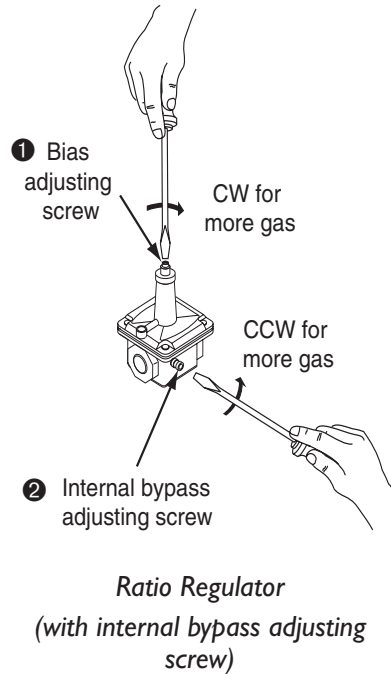

Bypass start gas with high turndown option:

1. Verify bias adjusting screw ① on ratio regulator spring column is six full clockwise turns ($360^\circ \times 6$) down from the top (initial setting).
2. Open all manual shut off valves.
3. Close internal bypass adjusting screw ② by turning it clockwise to closed position.
4. Set system control to stay at low fire during and after ignition sequence.
5. Ignite the burner.
6. If burner goes out due to main gas flame failure:
Turn bias adjusting screw ① a half turn clockwise to increase gas flow. Repeat ignition sequence until burner lights.
7. Slowly decrease gas flow with bias adjusting screw ①. Decrease gas flow until the flame signal becomes erratic. (Refer to flame monitoring relay literature for a description of an erratic flame signal.)
8. If burner has gone out:
Repeat ignition sequence. Turn internal bypass adjusting screw ② a half turn counterclockwise to increase gas flow at each attempt until burner lights.
9. Flame signal strength:
Adjust gas flow with internal bypass adjusting screw ② for lowest gas flow that maintains a stable flame signal:
 - counterclockwise, for more fuel
 - clockwise, for less fuel.
10. Verify low fire flame.
 - a. Drive the control motor from low fire and back. Verify low fire and stable flame signal are repeated.
 - b. Turn the burner off and repeat the ignition sequence. Verify low fire and stable flame signal are repeated.

Step5: Verify Settings

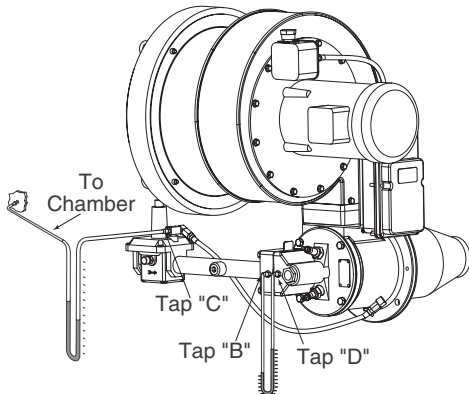

Setting verification:



Note:

There are no high fire gas adjustments or air adjustments when firing into a neutral chamber. However, air and gas pressures can be used to verify the burner system is properly adjusted.

1. With burner lit, drive control motor to high fire.
2. Wait for the chamber to reach normal operating conditions (e.g. chamber temperature, process flows, etc.).
3. Measure high fire fuel differential pressure between tap (B) and tap (D). Compare this to the "Fuel Orifice ΔP vs. Input" graph on the data sheet.
4. Measure high fire air differential pressure between tap (C) and the chamber. Compare this pressure to the "Air ΔP vs. Air Flow" graph on the data sheet.
5. Drive the control motor to low fire and verify low fire flame signal and flame appearance (if viewing).



Note:

Gas pressure at low fire will be too low to measure and verify the fuel settings.

6. Cycle burner from high to low several times to check repeatability of settings.
7. Readjust burner if the settings do not repeat as expected. If necessary, refer to Chapter 5, Maintenance & Troubleshooting.
8. Record all setup data as an aid for future troubleshooting and setup operations.



Caution:

Do not turn the combustion air blower off until the chamber temperature is below 250°F (121°C). This will prevent hot gases from back flowing into the burner and blower causing damage to the burner.

9. Stop the burner.



Maintenance & Troubleshooting

5

INTRODUCTION

This chapter is divided into two sections:

- Maintenance procedures
- Troubleshooting guide

Preventive maintenance is the key to a reliable, safe and efficient system. The core of any preventive maintenance system is a list of periodic tasks.

MAINTENANCE



Note:

These are guidelines only. The customer should make the final determination on maintenance intervals and tasks to be performed while considering the working environment.

Monthly Checklist


1. Inspect the flame sensing devices for good condition and cleanliness.
2. Check for proper air/gas pressures (Refer to the RatioAir Data Sheets, Series 115).
3. Test all the system alarms for proper response signals.
4. Check and clean igniter electrodes.
5. Check the air control valve for smooth, trouble free operation and adjustment.
6. Check for the proper operation of ventilating equipment.
7. Test the interlock sequence on all safety equipment. Manually force each interlock to intentionally fail while at the same time noting if related equipment closes or stops as specified by the manufacturer. Test the flame safeguard by manually shutting off the gas to the burner.
8. Test the manual gas shut off cocks for proper operation.
9. Clean and/or replace the combustion air blower filter.
10. Inspect and clean the combustion air blower rotor.

Yearly Checklist

1. Leak test the safety shut-off valves for tightness of closure.
2. Test the pressure switch settings by checking the switch movements against pressure settings and comparing these with the actual impulse pressure.
3. Visually check igniter cable and connectors.
4. Inspect impulse piping for leaks.
5. Remove, clean, and inspect all burners.
6. Remove and clean the orifice plate ⑤ .
7. Be sure the following components are not damaged or distorted:
 - the burner nozzle.
 - the igniter.
 - the flame sensors.
 - the combustion tube or block.

The nozzle and combustion tube/block can be inspected without removing the burner from the chamber wall or entering the chamber. Perform the following:

- a. Shut the burner off and manually close the main gas shut off cocks.
- b. Allow the chamber temperature to cool down to 250°F (121°C).
- c. Disconnect the gas piping at a union or the gas inlet flange ① provided on the burner.
- d. Remove the four bolts ②.
- e. Remove the rear cover ③ from the burner housing ④.
- f. To re-assemble, follow this sequence in the reverse order.

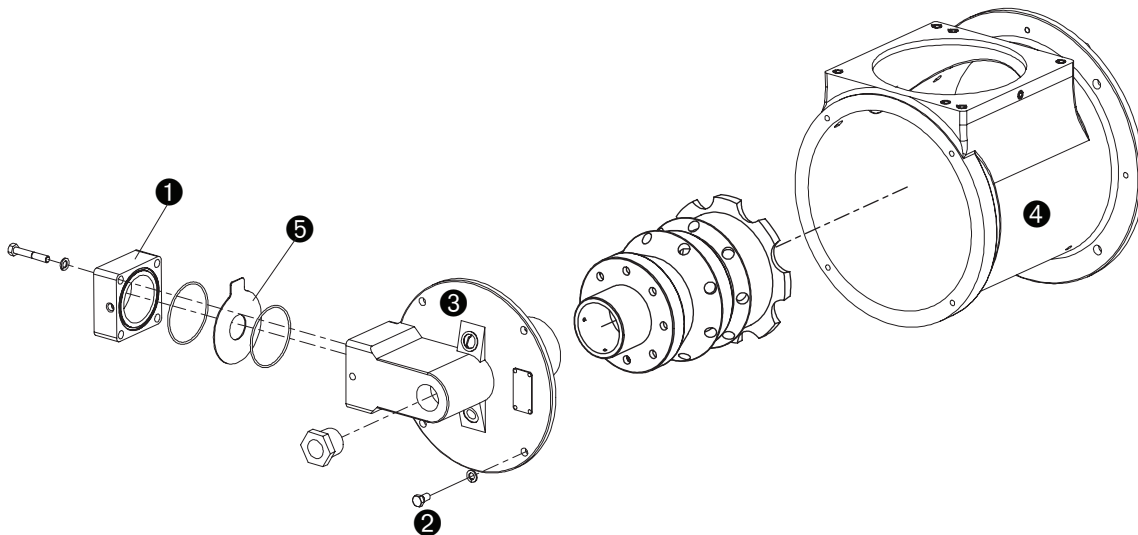

TROUBLESHOOTING PROCEDURES

PROBLEM	POSSIBLE CAUSE	SOLUTION
Start-up sequence runs but burner does not light.	No ignition: <ul style="list-style-type: none"> There is no power to the ignition transformer. 	Restore the power to the ignition transformer.
	No ignition: <ul style="list-style-type: none"> Open circuit between the ignition transformer and the igniter. 	Repair or replace the wiring to the igniter.
	No ignition: <ul style="list-style-type: none"> The igniter needs cleaning. 	Clean the igniter.
	No ignition: <ul style="list-style-type: none"> The igniter is not correctly grounded to the burner. 	Clean the threads on the igniter and the burner. NOTE: Do not apply grease to the threads on the igniter.
	No ignition: <ul style="list-style-type: none"> Igniter insulator is broken. Igniter is grounding out. 	Inspect the igniter. Replace if broken.
	Not enough gas: <ul style="list-style-type: none"> The gas pressure going into the ratio regulator is too low. 	Check the start-up settings. Measure the gas pressures and adjust where necessary.
	Not enough gas: <ul style="list-style-type: none"> The impulse line to the ratio regulator is leaking. 	Repair any leaks.
	Not enough gas: <ul style="list-style-type: none"> The pilot adjusting valve or bypass valve is not open far enough. 	Adjust bypass or low fire gas.
	Not enough gas: <ul style="list-style-type: none"> Start gas solenoid valve does not open. 	Check the solenoid valve coil for proper operation. Replace it if necessary.
	Not enough gas: <ul style="list-style-type: none"> Gas valve does not open. 	Check the wiring to the automatic gas shut-off valve. Check the output from the flame safeguard. Open manual gas cock.
Not enough gas: <ul style="list-style-type: none"> Ratio regulator is incorrectly set. 	Adjust the ratio regulator to the proper setting.	

PROBLEM	POSSIBLE CAUSE	SOLUTION
Start-up sequence runs but burner does not light. (continued)	No flame signal: • Broken flamerod • Dirty UV scanner lens	Inspect and clean sensor Replace if necessary
	No flame signal: • Spark plug and flamerod reversed	Exchange spark plug/flamerod or their wiring
	Too much gas: • Wrong or missing burner fuel orifice.	Check RatioAir Data Sheets, Series 115 for fuel orifice and the given fuel.
The low fire flame is weak or unstable.	• Not enough gas flowing to the burner.	Adjust the ratio regulator to increase the gas flow.
	• Not enough air.	Check for proper blower rotation. Check air filter for blockage. Compensate for chamber by opening the low fire air butterfly valve position.
The burner goes out when it cycles to high fire.	• Not enough gas pressure into the ratio regulator.	Check the start-up settings. Measure the gas pressures and adjust them where necessary. Check for valve train pressure loss.
	• Loading line to the ratio regulator is leaking.	Repair the leak in the loading line.
The burner is erratic and does not respond to adjustment.	Internal damage to the burner: • Some parts inside the burner are loose, dirty, or burned out.	Contact your Eclipse representative or Eclipse Combustion for further information.
The burner is unstable or produces soot, smoke, or excessive carbon monoxide.	• The air/gas ratio is out of adjustment.	Measure all the gas pressures and air pressures. Compare these pressures to the documented initial start-up settings and adjust them where necessary.
The burner cannot achieve full capacity.	• Air filter is blocked.	Clean or replace the air filter.
	• Gas pressure going into the ratio regulator is too low.	Adjust the gas pressure.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Cannot initiate a start sequence.	<ul style="list-style-type: none"> Air pressure switch has not made contact. 	Check air pressure switch adjustment. Check air filter. Check blower rotation. Check outlet pressure from blower.
	<ul style="list-style-type: none"> High gas pressure switch has activated. Low gas pressure switch has activated. 	Check incoming gas pressure. Adjust gas pressure if necessary. Check pressure switch setting and operation.
	<ul style="list-style-type: none"> Malfunction of the flame safeguard system (e.g., shorted-out flame sensor or electrical noise in the sensor line). No power to the control unit. 	Have a qualified electrician troubleshoot and correct the problem.
	<ul style="list-style-type: none"> Main power is off. 	Be sure the main power to the system is switched to the “on” position.


Parts List

Part Description	Item No.	RA0025	RA0040	RA0075	RA0100	RA0200	RA0300	RA0500	RA0750	RA1000
Body	10	7118-1	7118-1	7046-1	3994	3994	7036-1	7111-1	7124-3	7124-3
Rear Cover	20	7032-1	7032-1	3998-1	3995	3995-1	7037-1	7037-2	10002812	10002812
Nozzle	30	7033-1,7033-3	7033-3	7133-1	3997-1	3997-1	7116-1	7038-1	10002813-1	10002813-1
Gas Inlet Block, RC	40	3974-3	3973-2	7001-3	7156-1	7156-1	3973-1	3973-10	3996-3	3996-3
Gas Inlet Block, NPT	40	3974-4	3973-10	7001-1	7156-2	7156-2	3973-3	3973-2	3996-4	3996-4
Gas Orifice,STR ,NG	50	14191-38	14191-32	14934-25	14188-36	14188-19	14188-23	14188-18	14802-13	14802-12
Gas Orifice,MV ,NG	50	14191-35	14191-6	14934-19	14188-36	14188-42	14188-23	14188-24	14802-21	14802-12
Gas Orifice,HV ,NG	50	14191-10	14191-35	14934-8	14188-43	14188-4	14188-23	14188-2	14802-22	---
Gas Orifice,STR ,Propane	50	14191-34	14191-33	14934-9	14188-27	14188-4	14188-26	14188-44	-----	-----
Gas Orifice,MV ,Propane	50	14191-40	14191-17	14934-9	14188-27	14188-36	14188-16	14188-44	-----	-----
Gas Orifice,HV ,Propane	50	14191-17	14191-36	14934-5	14188-27	14188-4	14188-16	14188-44	-----	-----
Gas Orifice,STR ,Butane	50	14191-23	14191-34	14934-26	14188-15	14188-41	14188-6	14188-1	-----	-----
Gas Orifice,MV ,Butane	50	14191-40	14191-31	14934-10	14188-15	14188-21	14188-9	14188-1	-----	-----
Gas Orifice,HV ,Butane	50	14191-17	14191-37	14934-9	14188-15	14188-21	14188-43	14188-1	-----	-----
Comb. Tube,STR, Alloy	60	14887-6	14887-6	20400	20716-1	20716-1	101018	101247-1	10002787	10002787
Comb. Tube,MV, Alloy	60	108715-3	108715-4	21747-3	17183	15259	108721-1	100043	10003218-1	10003218-2
Comb. Tube,HV, Alloy	60	108715-2	108715-3	21747-1	17182	15260	108721	100042	10003218-2	10003218-3
Comb. Tube,STR, SiC	60	20474	20474	20463	20718	20718	-----	-----	-----	-----
Comb. Tube,MV, SiC	60	17046-3	17046-4	21793-3	17181	15261	-----	-----	-----	-----
Comb. Tube,HV, SiC	60	17046-2	17046-3	21793-1	17180	15262	-----	-----	-----	-----
Comb. Tube,STR, B & H	60	-----	-----	-----	-----	-----	100013	101161	10004465-68	10004466-68
Comb. Tube,MV, B & H	60	187265-3	100234-2	187330-68	187300-6	187316-6	187314-68	100016-68	10004466-68	10004467-68
Comb. Tube,HV, B & H	60	187265-2	100234-1	187328-68	187302-6	187317-6	187315-68	100015-68	10013593	10013593
Ratio Reg, NPT	70	20900	19997	15939	15939	20312	20312	10315	10316	10316
Ratio Reg, RC	70	11080	19998	19999	19999	20311	20311	19990	19989	19989
Ratio Reg,NPT,LH Bypass	70	-----	20594	20595	20595	-----	-----	-----	-----	-----
Ratio Reg,NPT,RH Bypass	70	-----	20596	20597	20597	-----	-----	-----	-----	-----
Ratio Reg,RC,LH Bypass	70	-----	20599	20600	20600	-----	-----	-----	-----	-----
Ratio Reg,RC,RH Bypass	70	-----	20601	20602	20602	-----	-----	-----	-----	-----
Spark Plug	90	23045	23045	10002322	10002322	10002322	23045	23045	23045	23045
Flame rod	100	23044-1	23044-1	13312-6	13312-9	13312-9	-----	-----	-----	-----
Actuator,M7284A-1004, HW	110	-----	-----	-----	12200	-----	-----	-----	-----	-----
Actuator,M7284C-1000, HW	110	-----	-----	-----	15273-4	-----	-----	-----	-----	-----
Actuator,EMP 424-5	110	-----	-----	-----	22735	-----	-----	-----	-----	-----
Actuator,EMP 423-5	110	-----	-----	-----	22755	-----	-----	-----	-----	-----
ACT,Eclipse Rotary,120v,0 degree	110	-----	-----	-----	ACT004A1B1A1A	-----	-----	-----	-----	-----
ACT,Eclipse Rotary,120v,180 degree	110	-----	-----	-----	ACT004A2B1A1A	-----	-----	-----	-----	-----
ACT,Eclipse Rotary,120v,90 degree RH	110	-----	-----	-----	ACT004A3B1A1A	-----	-----	-----	-----	-----
ACT,Eclipse Rotary,120v,90 degree LH	110	-----	-----	-----	ACT004A4B1A1A	-----	-----	-----	-----	-----
ACT,Eclipse Rotary,220v,0 degree	110	-----	-----	-----	ACT004A1A1A1A	-----	-----	-----	-----	-----
ACT,Eclipse Rotary,220v,180 degree	110	-----	-----	-----	ACT004A2A1A1A	-----	-----	-----	-----	-----
ACT,Eclipse Rotary,220v,90 degree RH	110	-----	-----	-----	ACT004A3A1A1A	-----	-----	-----	-----	-----
ACT,Eclipse Rotary,220v,90 degree LH	110	-----	-----	-----	ACT004A4A1A1A	-----	-----	-----	-----	-----
Air Switch,SMD	120	-----	-----	-----	14494	-----	-----	-----	-----	-----
Air Switch,AA-A2-6-3	120	-----	-----	-----	14641-1	-----	-----	-----	-----	-----
Air Switch,JD-2-R	120	-----	-----	-----	16928-1	-----	-----	-----	-----	-----
Air Switch,JD-2-P	120	-----	-----	-----	16928-3	-----	-----	-----	-----	-----
Air Switch, AA-A2-6-5	120	-----	-----	-----	20440	-----	-----	-----	-----	-----
Air Switch, AA-A2-4-5	120	-----	-----	-----	20475	-----	-----	-----	-----	-----
Blower, Packaged V1.1	130	-----	-----	-----	-----	-----	-----	-----	-----	-----
Gasket, Mounting	140	14932	14932	20422	14392	14392	10027	20151	10002831	10002831
Screw,Cap,SCH,Allen (2)	150	16022	16022	16021	16022	16022	-----	-----	---	---
Set Screw (2)	160	19969	19969	15885	15885	15885	15885	15885	21598	21598
Drive Screw (4)	170	-----	-----	-----	18933	-----	-----	-----	18933	18933
Nameplate	180	-----	-----	-----	23000	-----	-----	-----	23000	23000
Lock Washer (13)	190	-----	-----	-----	15222	-----	-----	-----	15222	15222
Screws Rear Cover (4)	200	15886	15886	15886	15886	15886	15886	20411	---	---
Peepsight	210	10509	10509	10509	10509	10509	13225	13225	10509	10509
Pressure Taps (3)	220	-----	-----	-----	13445	-----	-----	-----	13445	13445
O Rings (2)	230	14777	14777	17037	14778	14778	14778	14778	14781	14781
Gas Inlet Block Screws (4)	240	15887	15887	15887	15893	15893	15893	15893	15888	15888
Air Inlet Screws (4) -Block (NPT,RC)	250	15893	15893	20890	15888	15888	15892	15892	-----	-----
Air Inlet Screws (4) -BV	250	20246	20246	20257	16015	16015	15891	CA10594	20579	20579
Air Inlet Screws (4) -Welded Inlet	250	-----	-----	-----	-----	-----	-----	20579	20579	20579
Screws (4) - SiC Retainer	260	16022	16022	16022	10001	10001	-----	-----	10001	1001
Slip Fit Blower Screw (4)	270	15881	15881	15881	15881	15881	-----	-----	-----	-----
Washer, M6	280	15625	15625	15625	15625 (6)	15625 (6)	15625 (2)	15625 (2)	-----	-----
Blower, Plug	290	-----	-----	-----	20605	-----	-----	-----	20605	20605
Bushing	300	-----	-----	-----	-----	18503	18503	20305	20305	20305
Rear Cover Screws (4)	305	15886	15886	15886	15886	15886	15886	20401	15892	15892
Tee	310	-----	-----	-----	20682	-----	-----	-----	20682	20682
Plug	330	-----	-----	-----	15398	-----	-----	-----	15398	15398
BV Hold Down Screw	370	-----	-----	-----	-----	-----	16015	20284	---	---
Integral BV	380	102246	102246	102247	102269	102269	200102	10004828	101865	101865
Plastic tubing	390	-----	-----	-----	34505	-----	-----	-----	34505	34505
Braided Hose	395	-----	-----	-----	SC4	-----	-----	-----	SC4	SC4
Braided Hose	396	-----	-----	-----	-----	-----	-----	-----	-----	SC6

Parts List (Continued)

Part Description	Item No.	RA0025	RA0040	RA0075	RA0100	RA0200	RA0300	RA0500	RA0750	RA1000
Fitting (Plastic) (2)	410				14689				19668	19668
Fitting (Braided Hose) (2)	410				1494					
Flare Fitting (Braided Hose) (2)	420				30				32	32
Air Inlet Block, NPT	440	3973-3	3973-2	7108-2	3996-1	3996-1	100041	-----	-----	-----
Air Inlet Block, RC	440	3973-1	3973-10	7108-3	3996-2	3996-2	100041-1	-----	101111	101111
Air Inlet Weld Fitting	440	-----	-----	-----	-----	-----	100040	100044	101111	101111
Cone (RA0200 uses cone w/ HV & NG)	450	10001732-8	10001732-8	-----	10001732-2	10001732-2	10001732-1	10001732-6	10015028-2	10015028-1
Mounting Kit HW, Inverted	460	100254	100254	100258	100262	100262	100266	100270	10113682	10113682
Mounting Kit BC, Inverted	460	100255	100255	100259	100263	100263	100267	100271	10013684	10013684
Mounting Kit HW, Upright	460	100256	100256	100260	100264	100264	100268	100272	100274	100274
Mounting Kit BC, Upright	460	100257	100257	100261	100265	100265	100269	100273	100275	100275
Mounting Kit Eclipse Rotary	460	100318	100318	100320	100322	100322	100324	100325	100326	100326
Mounting Kit, JD-2	470				100074-1				100074-1	100074-1
Mounting Kit, SMD	470				100075				100075	100075
Mounting Kit, Dungs	470				101146				101146	101146
Mounting Kit, Dungs w/ Braided Hose	470				101182				101182	101182
Mounting Kit, JD-2 w/ Braided Hose	470				101183				101183	101183
Mounting Kit, SMD w/ Braided Hose	470				101184				101184	101184
Rear Cover Adapter	480	-----	-----	-----	-----	-----	-----	20150	-----	-----
Gasket, SIC Tube Retainer	490	19971	19971	20465	10005	10005	-----	-----	-----	-----
Retainer, SIC Tube	500	19970	19970	20464	10003	10003	-----	-----	-----	-----
IBV Spacer	510	-----	-----	-----	-----	-----	-----	10004867	10012506	10012506
Nipple W/ Pilot Coupling, NPT	550	12100N	100174-63	100174-65	100174-65	100152-1	100152-1	100174-39	100174-79	100174-79
Nipple W/ Pilot Coupling, RC	550	10008114	100174-64	100174-37	100174-37	100174-62	100174-62	100174-40	100174-80	100174-80
Plug (Pilot Coupling) NPT	560	-----	19477	19477	19477	19477	19477	19477	19477	19477
Plug (Pilot Coupling) RC	560	-----	20401	20401	20401	20401	20401	20401	20401	20401
Butterfly Valve, RC3	570	-----	-----	-----	-----	-----	-----	-----	101109	101109
Butterfly Valve, 3 in.	570	-----	-----	-----	-----	-----	-----	-----	501221	501221
P.F. Nipple	580	-----	-----	-----	-----	-----	-----	-----	15195	15195
Sched Nipple	580	-----	-----	-----	-----	-----	-----	-----	22082	22082
High or Low Microswitch Kit (1 switch)	590	100181-1	100181-1	100182-1	100183-1	100183-1	100184-1	100185-1	100197-1	100197-1
High and Low Microswitch Kit (2 switches)	590	100181-2	100181-2	100182-2	100183-2	100183-2	100184-2	100185-2	100197-2	100197-2
Hex Screw	610	-----	-----	-----	-----	-----	-----	-----	CA10827	CA10827
Stainless Steel Washer6	620	-----	-----	-----	-----	-----	-----	-----	22499	22499
Hex Nut	630	-----	-----	-----	-----	-----	-----	-----	CA10829	CA10829
TBE Nipple	640	-----	-----	-----	-----	-----	-----	-----	18682	18682
P.F. Elbow	650	-----	-----	-----	-----	-----	-----	-----	18595	18595
Hex Nut	660	-----	-----	-----	-----	-----	-----	-----	21768	21768

Parts Drawing

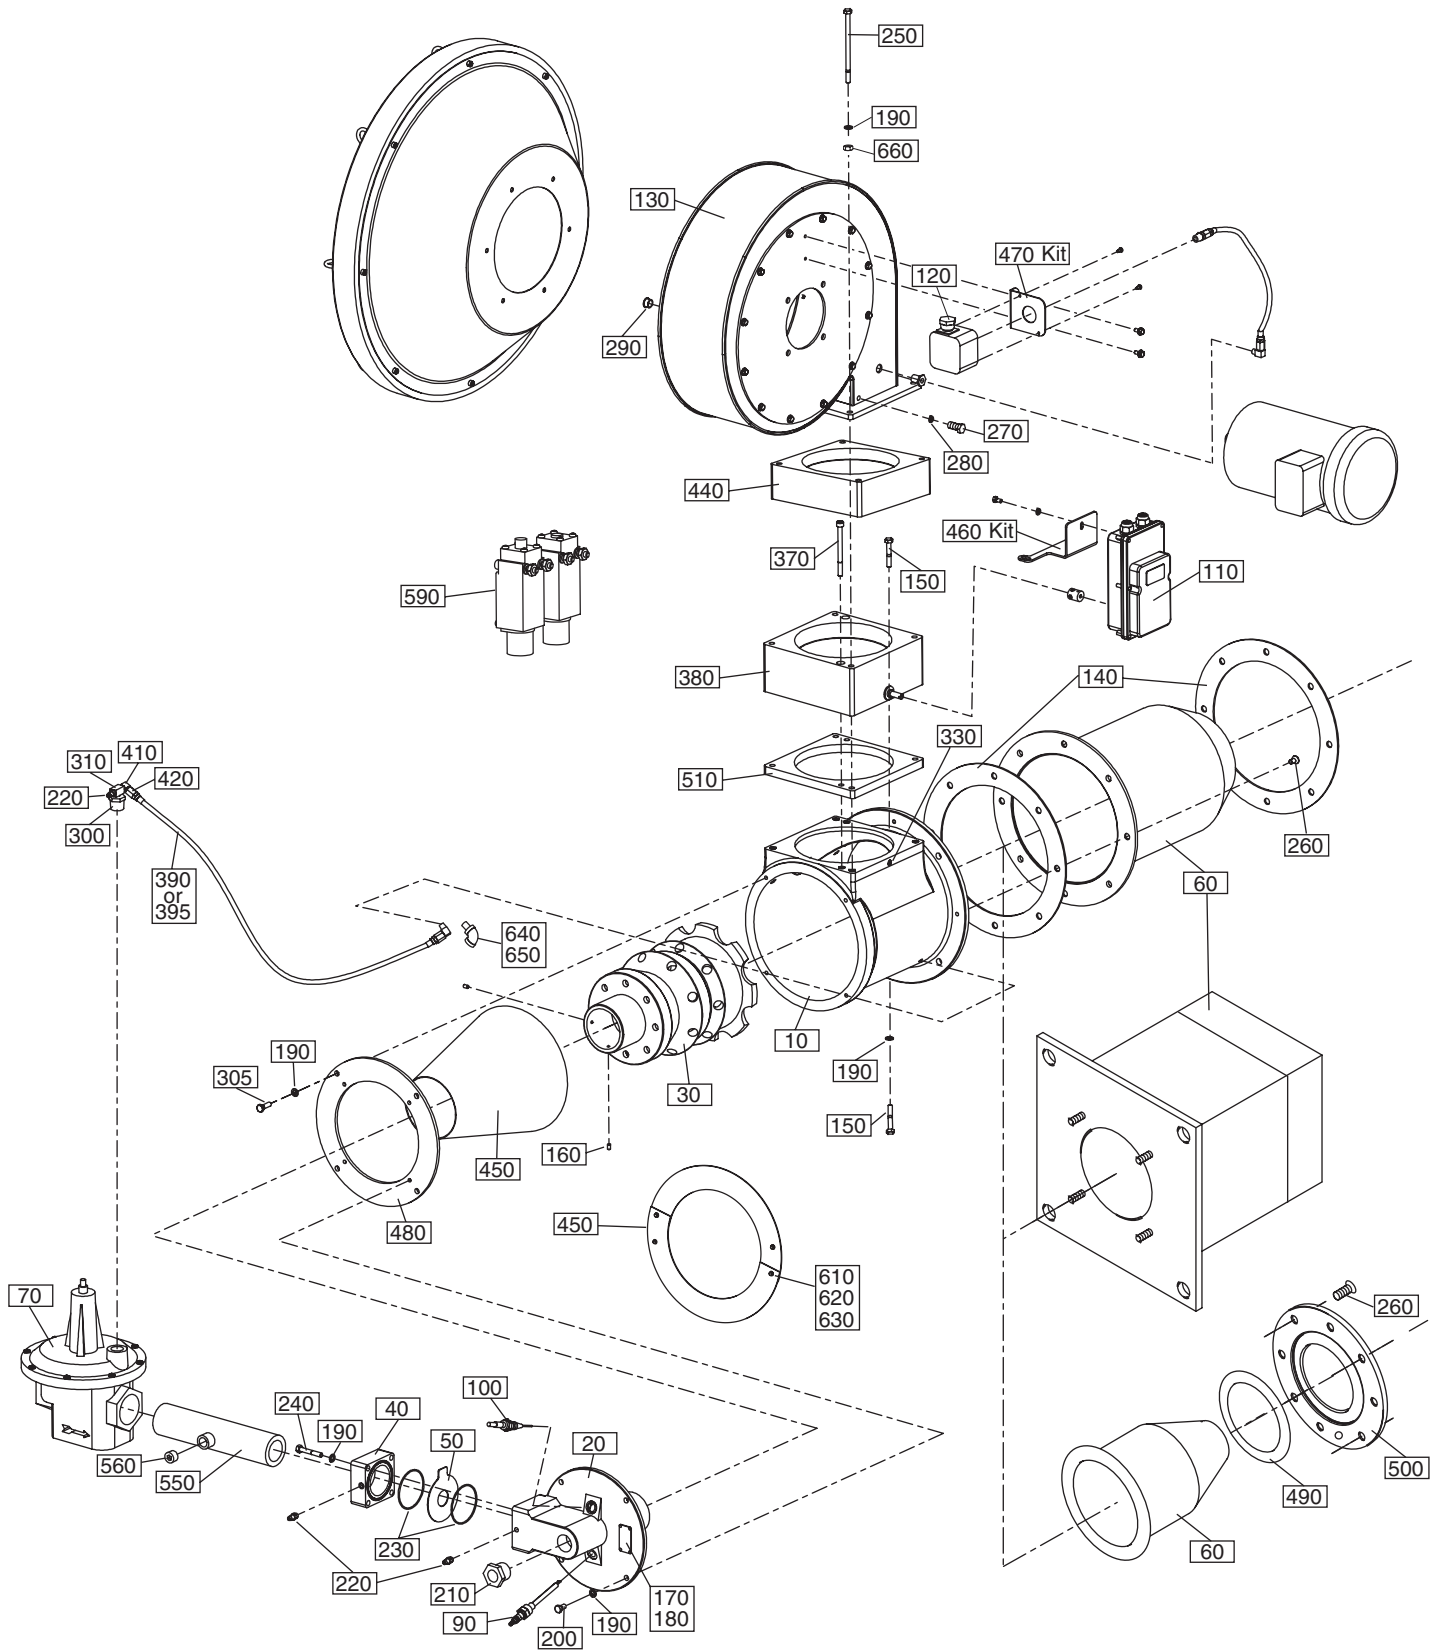



Appendix

CONVERSION FACTORS

Metric to English.

From	To	Multiply By
cubic meter (m ³)	cubic foot (ft ³)	35.31
cubic meter/hour (m ³ /h)	cubic foot/hour (cfh)	35.31
degrees Celsius (°C)	degrees Fahrenheit (°F)	(°C × 1.8) + 32
kilogram (kg)	pound (lb)	2.205
kilowatt (kW)	BTU/hr	3414
meter (m)	foot (ft)	3.28
millibar (mbar)	inches water column ("w.c.)	0.401
millibar (mbar)	pounds/sq in (psi)	14.5 × 10 ⁻³
millimeter (mm)	inch (in)	3.94 × 10 ⁻²
MJ/m ³ (normal)	BTU/ft ³ (standard)	2.491 × 10 ⁻²

Metric to Metric.



 


 
 
 


 
 
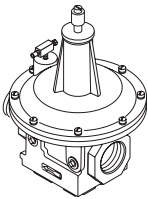
kiloPascals (kPa)	millibar (mbar)	10
meter (m)	millimeter (mm)	1000
millibar (mbar)	kiloPascals (kPa)	0.1
millimeter (mm)	meter (m)	0.001

English to Metric.



From	To	Multiply By
BTU/hr	kilowatt (kW)	0.293 × 10 ⁻³
cubic foot (ft ³)	cubic meter (m ³)	2.832 × 10 ⁻²
degrees Fahrenheit (°F)	degrees Celsius (°C)	(°F – 32) ÷ 1.8
foot (ft)	meter (m)	0.3048
inches (in)	millimeter (mm)	25.4
inches water column ("wc)	millibar (mbar)	2.49
pound (lb)	kilogram (kg)	0.454
pounds/sq in (psi)	millibar (mbar)	68.95
BTU/ft ³ (standard)	MJ/m ³ (normal)	40.14

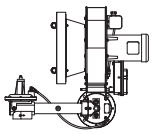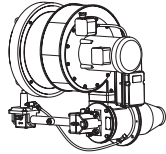**KEY TO SYSTEM
SCHEMATICS**

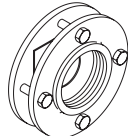These are the symbols used in the schematics.

Symbol	Appearance	Name	Remarks	Bulletin/ Info Guide
		RatioAir		
		Main Gas Shutoff Valve Train	Eclipse Combustion, Inc. strongly endorses NFPA as a minimum	756
		Gas Cock	Gas cocks are used to manually shut off the gas supply on both sides of the main gas shut-off valve train.	710
		Solenoid Valve (normally closed)	Solenoid valves are used to automatically shut off the gas supply on a bypass gas system or on small capacity burners.	760
		Fuel Orifice Meter	Fuel orifice meters are used to measure gas flow.	910
		Adjustable Limiting Orifice	Adjustable limiting orifices are used for fine adjustment of gas flow.	
		Pressure Regulator	A pressure regulator reduces gas pressure to a stable, usable pressure.	684
		Ratio Regulator	A ratio regulator is used to control the air/gas ratio. The ratio regulator is a sealed unit that adjusts the gas flow in ratio with the air flow. To do this, it measures the air pressure with a pressure sensing line, the impulse line. This impulse line is connected between the top of the ratio regulator and	742

**KEY TO SYSTEM
SCHEMATICS (CONTINUED)**

Symbol	Appearance	Name	Remarks	Bulletin/ Info Guide
		Pressure Taps		
		Impulse Line		



Offered By:

Power Equipment Company
2011 Williamsburg Road
Richmond, Virginia 23231
Phone (804) 236-3800
Fax (804) 236-3882

www.peconet.com