



# RatioMatic Burners

Model RM100



Version 3.10

## Main Specifications - RM100

PARAMETER		SPECIFICATIONS			
		English		Metric	
		Capacity @ Chamber Pressure			
		BTU/hr @ "w.c.		kW @	mbar
Maximum input	60 Hz packaged blower	1,340,000	-2.0	393	-5,0
		1,260,000	-1.0	370	-2,5
		1,170,000	0.0	343	0,0
		1,080,000	1.0	316	2,5
		980,000	2.0	270	5,0
	50 Hz packaged blower	1,360,000	-2.0	398	-5,0
		1,280,000	-1.0	375	-2,5
		1,200,000	0.0	351	0,0
		1,110,000	1.0	325	2,5
		1,010,000	2.0	296	5,0
Note: Contact factory for varying chamber pressures or pressures outside the range: -2.0 to 2.0" w.c. (-5,0 to 5,0 mbar)					
Minimum input	with high turndown ratio regulator	BTU/hr		kW	
	with standard ratio regulator	30,000		9	
		40,000		12	
Main gas inlet pressure • fuel pressure at ratio regulator inlet		10 to 20 "w.c.		25 to 50 mbar	
High fire flame length • measured from the outlet end of the combustor.	Natural Gas	32 in		813 mm	
	Propane/Butane	38 in		965 mm	
Maximum chamber temperature	Alloy tube SiC tube	°F		°C	
		1500		820	
		1900		1040	
Flame detection		Flame rod or UV scanner			
Fuel		Natural Gas, Propane or Butane. For any other mixed gas, contact Eclipse Combustion for orifice sizing			

- All information is based on laboratory testing. Different chamber size and conditions will affect the data.
- Maximum inputs are given for the standard combustion air blower without an air filter.
- All inputs based upon gross calorific values and standard conditions; 1 atmosphere, 70° F ( 21°C).
- Eclipse reserves the right to change the construction and/or configuration of our products at any time without being obliged to adjust earlier supplies accordingly.

## Performance Graphs RatioMatic RMI00

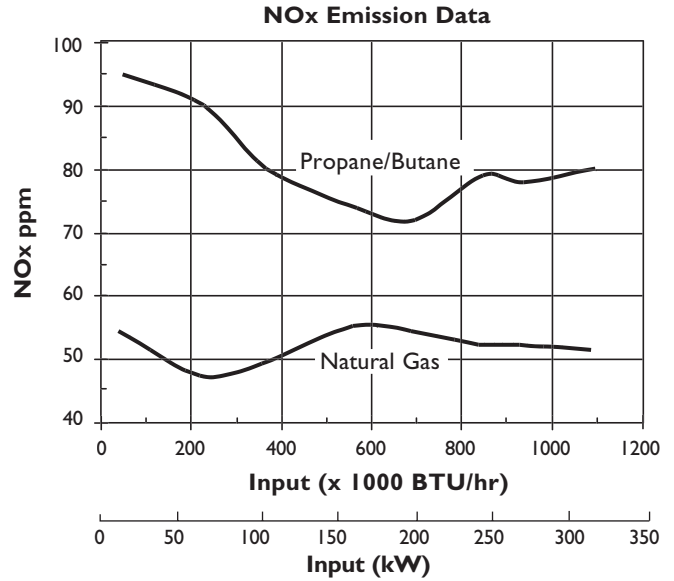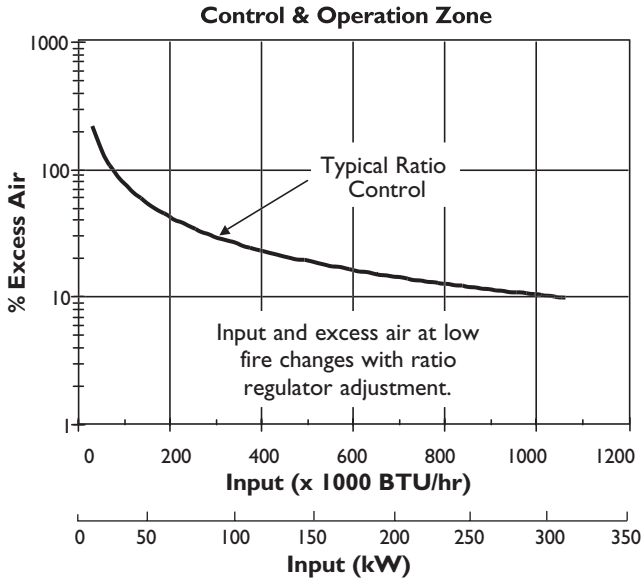



NOx emission data is given for:

- Ambient combustion air ~70 F (20 C)
- Less than 700 F (370 C) firing chamber
- Minimal process air velocity
- Low fire input adjusted to 30,000 BTU/hr (9kW)
- ppm volume dry at 3% O<sub>2</sub>
- Neutral chamber pressure


Emissions are influenced by:

- Chamber conditions
- Fuel type
- Firing rate
- Ratio regulator adjustment
- Combustion air temperature


CO emission is largely influenced by chamber conditions. Contact your local Eclipse Combustion representative for an estimate of CO emission on your application.

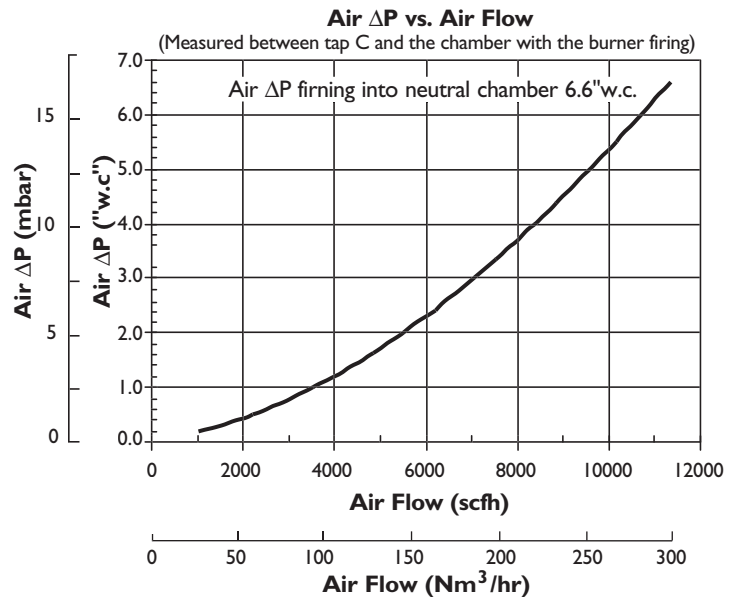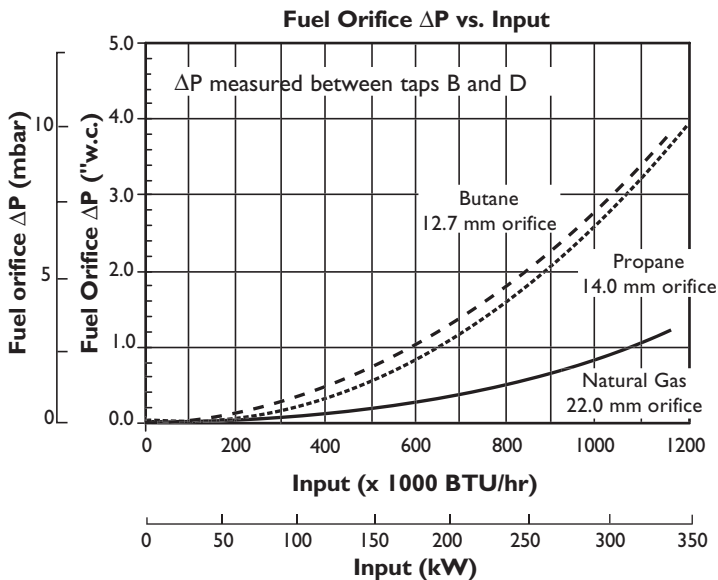


## Dimensions-RM100

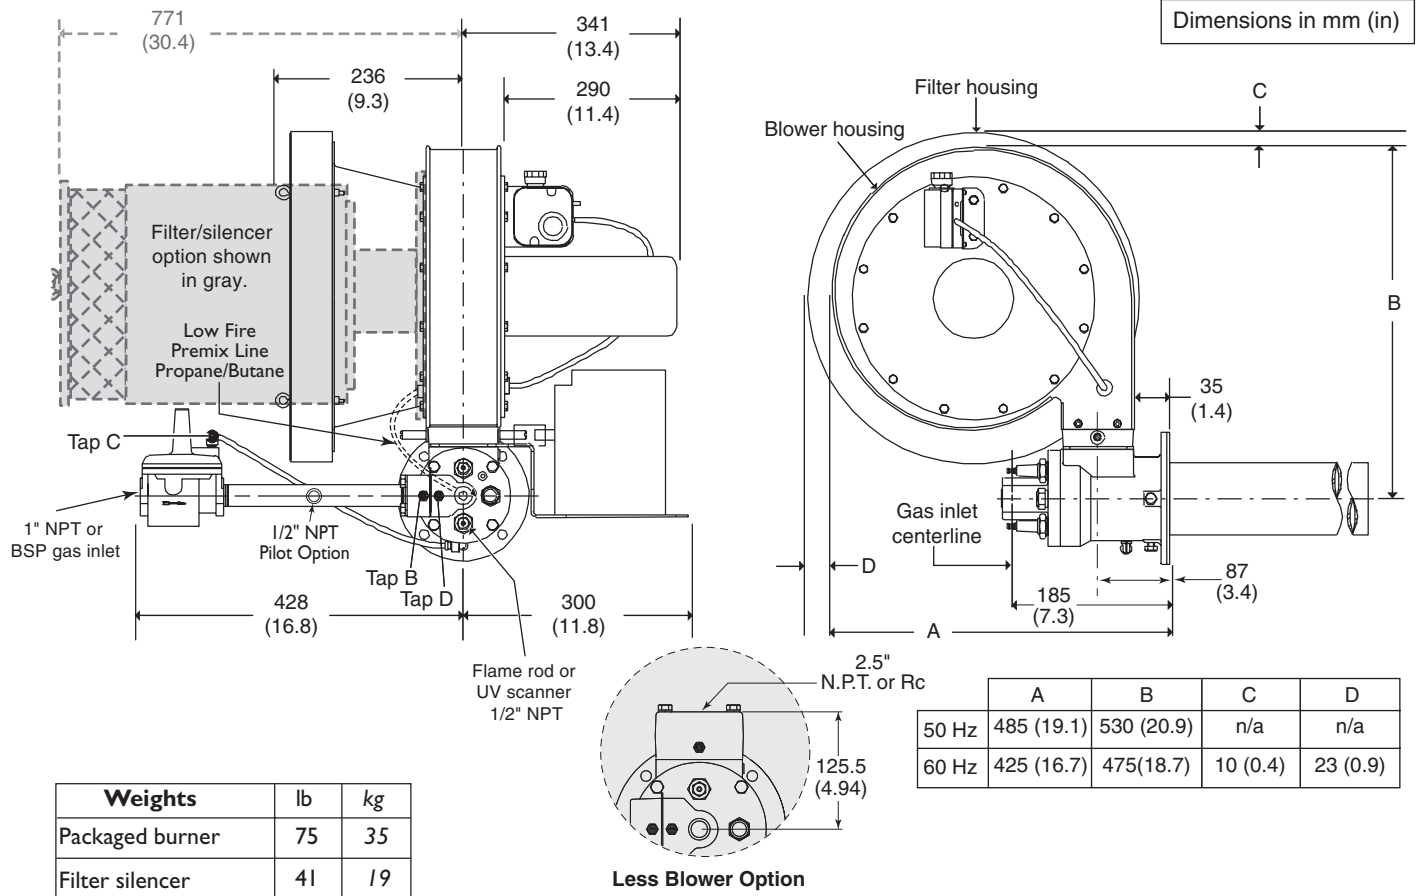

## Combustor types

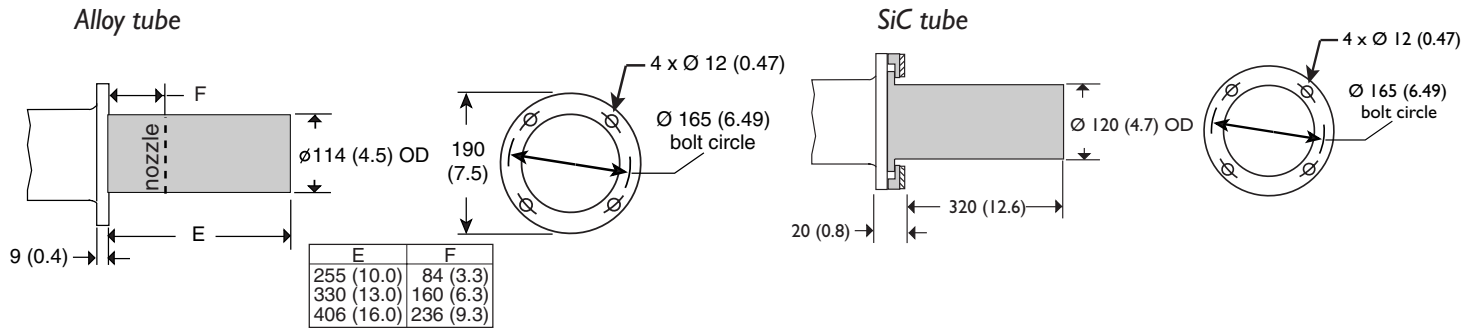

## Burner configuration

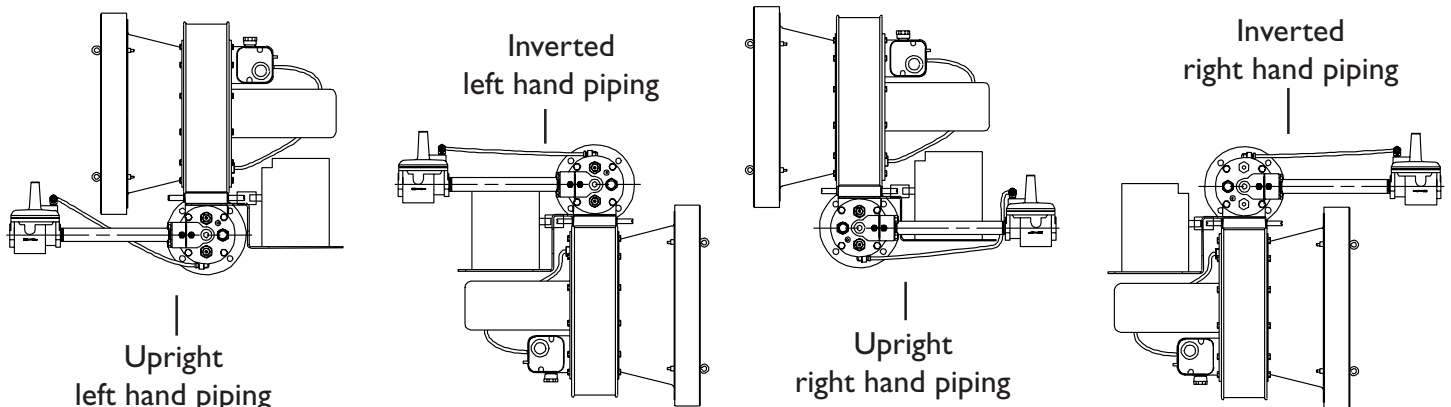



**Offered By:**

Power Equipment Company  
2011 Williamsburg Road  
Richmond, Virginia 23231  
Phone (804) 236-3800  
Fax (804) 236-3882

---

[www.peconet.com](http://www.peconet.com)